

AI Binocular Vision Recognition Sensor(Face & Palm Vein & QR Code)

Introduction

Features

Applications

Specifications

Functional diagram

Board Overview

UART interface

USB interface

Microphone interface
(reserved)

Speaker interface
(reserved)

□ Dimensional Drawing

Installation height and tilt
angle

Tutorial

Requirements

Connection Diagram

Registering face & palm
print Sample Code

Expected Results

Continuously identify faces,
palm prints, and QR codes
Sample Code

Introduction

The AI binocular vision recognition sensor uses an AI main chip and is equipped with two 2-megapixel high-definition cameras. The cameras use color and infrared cameras respectively, which can be recognized normally in dark environments. The module uses the LINUX fast start operating system to achieve fast startup. The local embedded face binocular 3D liveness detection algorithm, the deep neural network recognition algorithm based on big data training, the QR code recognition algorithm, and the palm print and palm vein algorithm realize the face, QR code, and palm vein recognition functions, and output the recognition results through UART. At the same time, the color camera UVC video can be transmitted through USB (expandable to UAC audio and video function) for local audio and video display and playback or remote video and audio transmission functions.

The AI binocular vision recognition sensor starts quickly and supports both power-off low power consumption and constant power supply dual modes. In the constant power supply mode, when the module is set to low-power automatic detection mode, automatic detection and recognition of faces, palm veins and QR codes can be realized, which is convenient for docking with third-party products and realizes multiple identity authentication functions.



	Introduction
	Features
	Applications
	Specifications
	Functional diagram
	Board Overview
	UART interface
	USB interface
	Microphone interface (reserved)
	Speaker interface (reserved)
□	Dimensional Drawing
	Installation height and tilt angle
	Tutorial
	Requirements
	Connection Diagram
	Registering face & palm print Sample Code
	Expected Results
	Continuously identify faces, palm prints, and QR codes Sample Code

It provides UART protocol, supports third-party integrated docking, and realizes audio and video transmission docking of identity recognition functions. The AI binocular vision recognition sensor has no computing power requirements for third-party devices, is plug-and-play, and has strong versatility. It can be used to upgrade various new and old products that require multiple identity authentication methods such as face, QR code, and vein and palm print.

Features

- Binocular 3D liveness detection resists spoofing via photos/videos
- Neural network-based algorithms: face recognition, palm vein recognition, QR code decoding
- Local storage: 1,000 faces + 1,000 palm vein templates
- Operates in complete darkness and non-direct sunlight outdoors
- Zero host-computation requirement; all AI processing occurs offline on-module

Applications

- Smart home systems
- Smart door locks
- Self-service retail payment terminals
- 3D face/palm vein payment systems
- Palm vein authentication systems

Specifications

- Hardware Parameters
 - SoC: Arm CPU@900MHz, NPU@0.5TOPS, RISC-V@600MHz
 - DDR2: 64MB



Introduction

Features

Applications

Specifications

Functional diagram

Board Overview

UART interface

USB interface

Microphone interface
(reserved)

Speaker interface
(reserved)

Dimensional Drawing

Installation height and tilt
angle

Tutorial

Requirements

Connection Diagram

Registering face & palm
print Sample Code

Expected Results


Continuously identify faces,
palm prints, and QR codes

Sample Code

- Flash: 32MB
- Cameras: Dual 1/5" CMOS, 2MP, dual MIPI interfaces
- Lens: FOV: 83° diagonal; optimal focus: 60cm
- LED: IR@850nm, RGB@650nm (90° illumination)
- USB: UVC video transmission (expandable to UAC); MJPEG output (H.264/YUY2 expandable)
- Communication: UART@115200 baud
- Power Parameters
 - Supply voltage: 5-12V
 - Operating current: 320-330mA@8V
 - Standby current: 120-130mA (auto-detection mode)
 - Shutdown current: 0μA (non-auto-detection mode)
- Other Parameters
 - Operating temperature: -20°C to +60°C
 - Storage temperature: -30°C to +70°C
 - Humidity: 10-93% RH (non-condensing)
 - Audio I/O: Expandable (speaker/microphone)
 - Boot time: 900ms-2.5s (varies with stored user count)
 - User capacity: 1,000 faces; 1,000 palm veins
 - Algorithms: Binocular liveness detection, deep learning face recognition, palm vein recognition, QR code recognition
 - Liveness metrics:
 - FAR (False Acceptance Rate) $\leq 1\%$
 - FRR (False Rejection Rate) $\leq 1\%$
 - Face recognition:
 - Pass rate: 98.85%
 - FAR: 0.001%

- Recognition angle: $\pm 20^\circ$ pitch/yaw; supports multi-angle enrollment
- Detection range: Face: 30–120cm, Palm vein/QR code: 15cm
- Dimensions: 57.8×20×10.12mm

Functional diagram

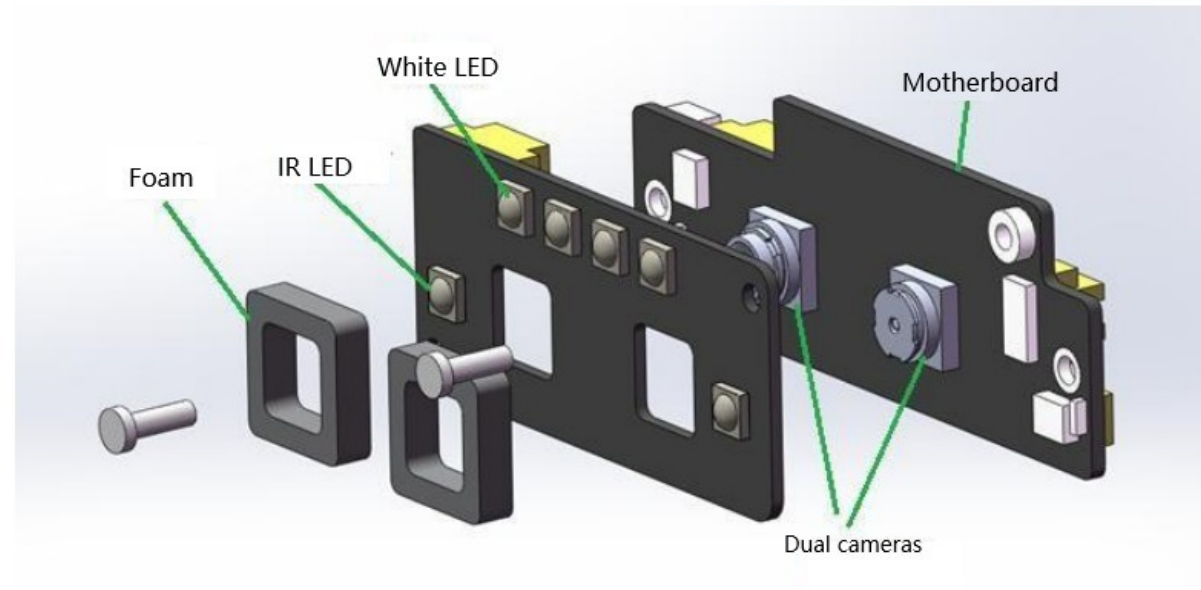

1. Motherboard

The algorithm motherboard uses an AI main chip and a Linux quick-start operating system. It has transplanted face recognition, palm print and vein, and QR code algorithms, and developed application firmware, which mainly realizes the functions of registration and recognition, and outputs recognition results.

Introduction

Features

Applications

Specifications

Functional diagram

Board Overview

UART interface

USB interface

Microphone interface
(reserved)

Speaker interface
(reserved)

□ Dimensional Drawing

Installation height and tilt
angle

Tutorial

Requirements

Connection Diagram

Registering face & palm
print Sample Code

Expected Results

Continuously identify faces,
palm prints, and QR codes
Sample Code

Introduction	
Features	
Applications	
Specifications	
Functional diagram	
Board Overview	
UART interface	
USB interface	
Microphone interface (reserved)	
Speaker interface (reserved)	
□ Dimensional Drawing	
Installation height and tilt angle	
Tutorial	
Requirements	
Connection Diagram	
Registering face & palm print Sample Code	
Expected Results	
Continuously identify faces, palm prints, and QR codes Sample Code	

2. Dual cameras

Includes color and infrared cameras, using a 2-megapixel CMOS chip with an 850 lens and a 650 lens.

3. Infrared light & white light

(White light can be used. When white light is not used, black and white images are displayed in the dark) The function of infrared light is to provide real-time fill light for infrared camera. The function of white light is to automatically start fill light when the environment is not bright enough to ensure the clarity of infrared and color images.

4. Foam

Used to isolate the fill light and COMS to prevent light from entering COMS and causing image glare.

5. Built-in algorithm

1. Binocular face liveness detection algorithm

2. Deep learning face recognition algorithm

3. QR code recognition algorithm

Board Overview

Introduction

Features

Applications

Specifications

Functional diagram

Board Overview

UART interface

USB interface

Microphone interface
(reserved)

Speaker interface
(reserved)

Dimensional Drawing

Installation height and tilt
angle

Tutorial



Requirements

Connection Diagram

Registering face & palm
print Sample Code

Expected Results

Continuously identify faces,
palm prints, and QR codes
Sample Code

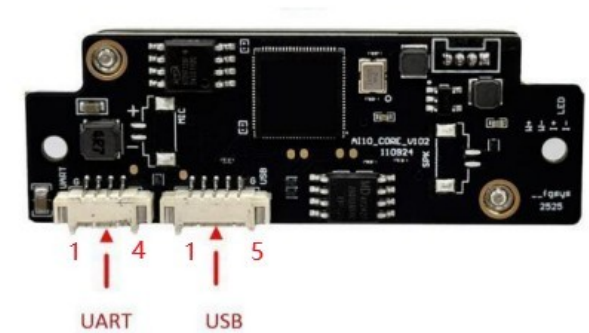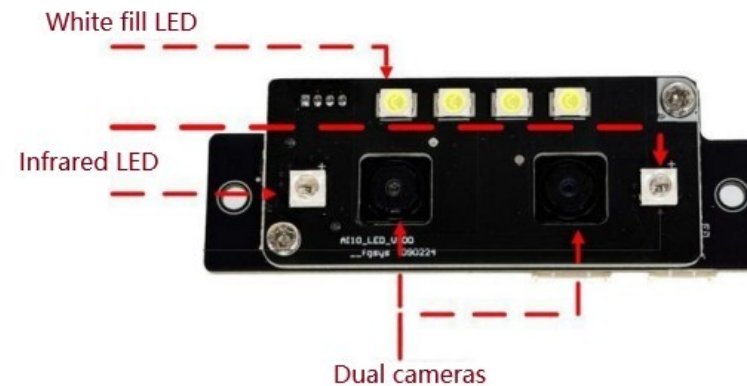

UART interface

Pin	Color line sequence	Function description
1	Black line	GND
2	Yellow line	UART_RX
3	Green line	UART_TX
4	Red line	VCC 5~12V

USB interface

Can output video signals for screen display, support standard UVC video, MJPEG/YUY2/H.264 encoding, and have horizontal and vertical screens with multiple resolutions. Can be expanded to realize UAC audio function, can realize voice intercom function.

	Introduction
	Features
	Applications
	Specifications
	Functional diagram
	Board Overview
	UART interface
	USB interface
	Microphone interface (reserved)
	Speaker interface (reserved)
□	Dimensional Drawing
	Installation height and tilt angle
	Tutorial
	Requirements
	Connection Diagram
	Registering face & palm print Sample Code
	Expected Results
	Continuously identify faces, palm prints, and QR codes Sample Code

Pin	Functional Description
1	VCC 5V
2	Floating
3	DM USB data line D-
4	DP USB data line D+
5	GND

Microphone interface (reserved)

Mainly used to receive sound signals and realize intercom function


Pin	Name	Functional Description
1	Negative pole	MIC-
2	Positive pole	MIC+

Speaker interface (reserved)

Mainly used for voice playback

Pin	Name	Functional Description
1	SPK	1W/8Ω
2	SPK	1W/8Ω

Dimensional Drawing

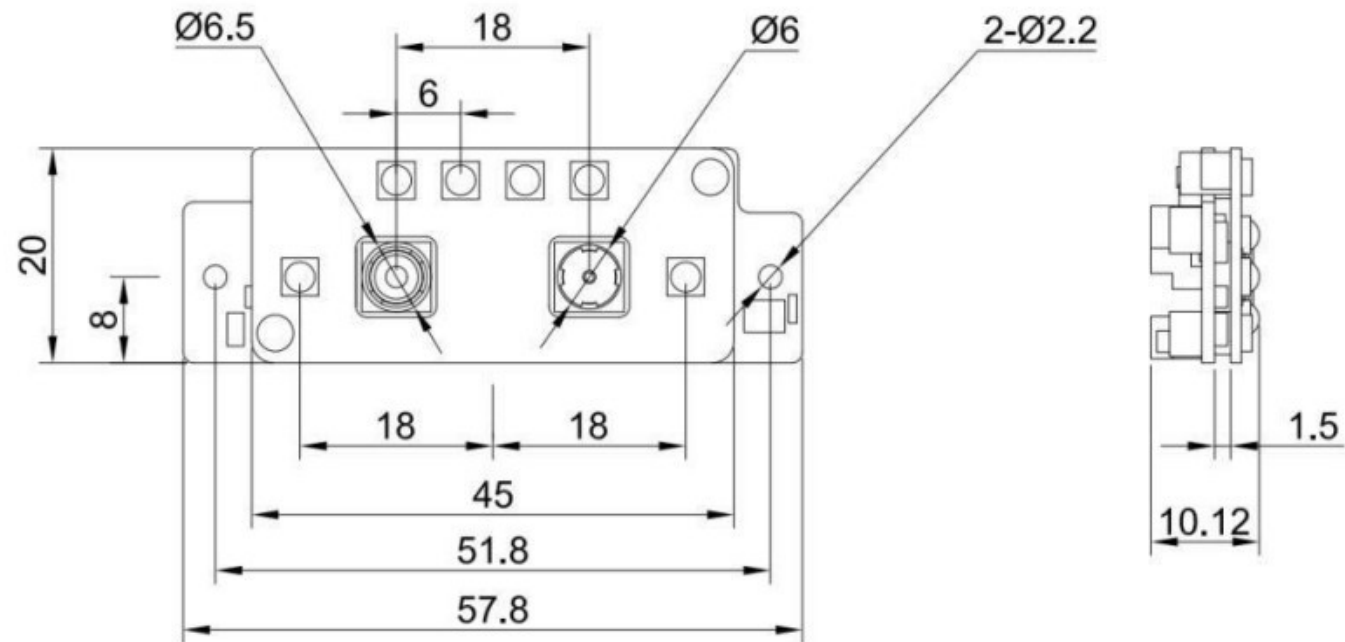

Installation height and tilt angle

Depending on the installation height of the product, it is recommended to use an external bracket to adjust the tilt angle of the product to suit user-friendly identification of different heights. The recommended tilt angle and identification height coverage range at various installation heights are shown in the following table:

Introduction

Features

Applications

Specifications

Functional diagram

Board Overview

UART interface

USB interface

Microphone interface
(reserved)

Speaker interface
(reserved)

□ Dimensional Drawing

Installation height and tilt
angle

Tutorial

Requirements

Connection Diagram

Registering face & palm
print Sample Code

Expected Results

Continuously identify faces,
palm prints, and QR codes
Sample Code

	Introduction
	Features
	Applications
	Specifications
	Functional diagram
	Board Overview
	UART interface
	USB interface
	Microphone interface (reserved)
	Speaker interface (reserved)
□	Dimensional Drawing
	Installation height and tilt angle
	Tutorial
	Requirements
	Connection Diagram
	Registering face & palm print Sample Code
	Expected Results
	Continuously identify faces, palm prints, and QR codes Sample Code

Installation height	Recommended tilt angle	Identification distance	Human height coverage range
130cm	20°	30~100cm	130~200cm
140cm	12°	30~100cm	130~200cm
150cm	0°	30~100cm	130~200cm

Introduction

Features

Applications

Specifications

Functional diagram

Board Overview

UART interface

USB interface

Microphone interface
(reserved)

Speaker interface
(reserved)



Dimensional Drawing

Installation height and tilt
angle

Tutorial


Requirements

Connection Diagram

Registering face & palm
print Sample Code

Expected Results

Continuously identify faces,
palm prints, and QR codes
Sample Code

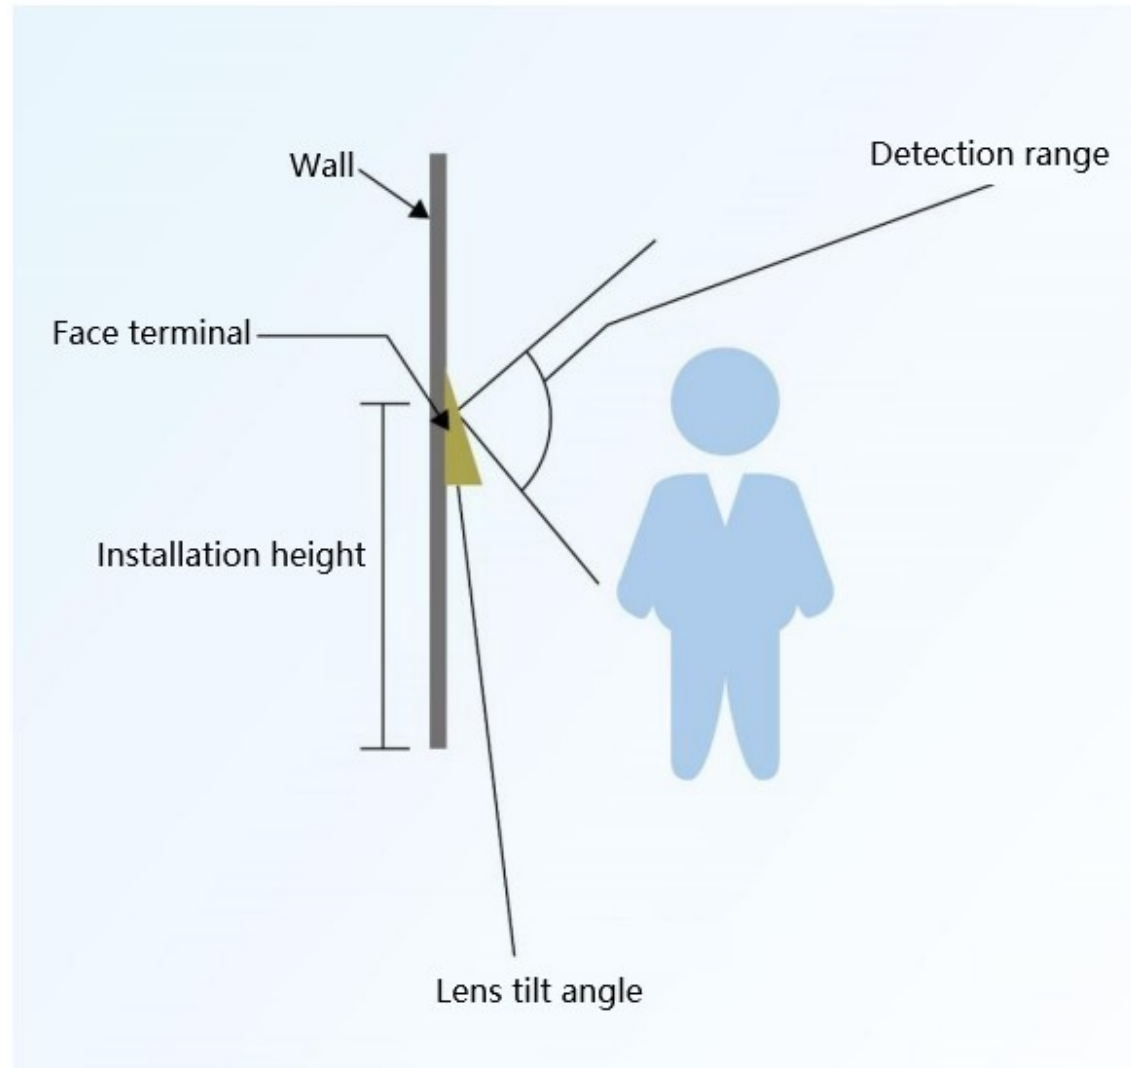

Tutorial

Requirements

- Hardware

- DFRduino UNO R3 (<https://www.dfrobot.com/product-838.html>) x 1
- Gravity: IO Expansion Shield for Arduino V7.1 (<https://www.dfrobot.com/product-1009.html>) x1
- AI Binocular Vision Recognition Sensor(Face & Palm Vein & QR Code) (<https://www.dfrobot.com/product-2972.html>) x1
- 1.25mm 4-pin to Dupont female connector cable ×1
- USB data cable ×1

Introduction

Features

Applications

Specifications

Functional diagram

Board Overview

UART interface

USB interface

Microphone interface
(reserved)

Speaker interface
(reserved)

□ Dimensional Drawing

Installation height and tilt
angle

Tutorial

Requirements

Connection Diagram

Registering face & palm
print Sample Code

Expected Results

Continuously identify faces,
palm prints, and QR codes

Sample Code

Introduction

Features

Applications

Specifications

Functional diagram

Board Overview

UART interface

USB interface

Microphone interface
(reserved)

Speaker interface
(reserved)

□ Dimensional Drawing

Installation height and tilt
angle

Tutorial

Requirements


Connection Diagram

Registering face & palm
print Sample Code

Expected Results

Continuously identify faces,
palm prints, and QR codes

Sample Code

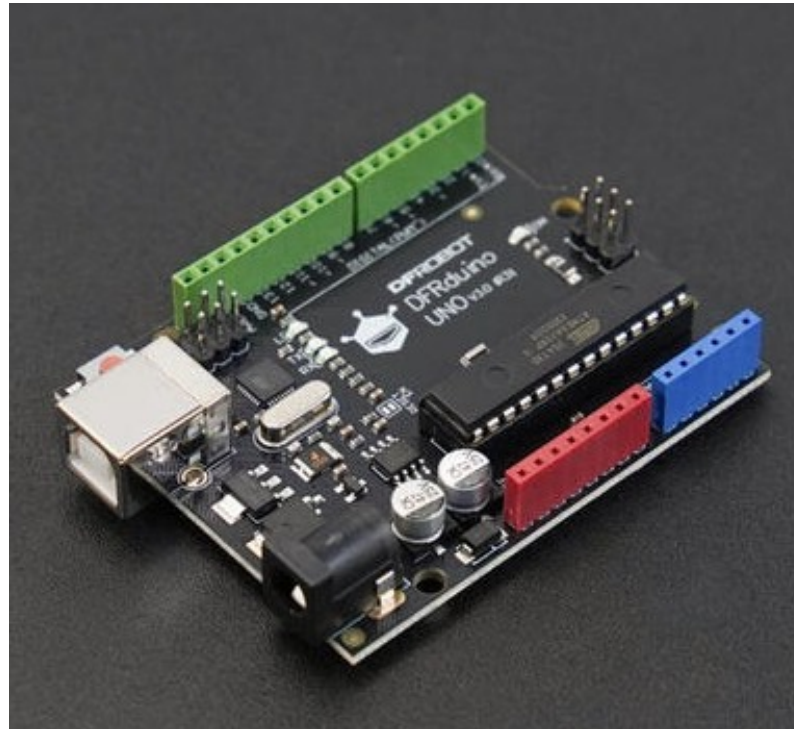

Introduction

Features

Applications

Specifications

Functional diagram

Board Overview

UART interface

USB interface

Microphone interface
(reserved)

Speaker interface
(reserved)

□ Dimensional Drawing

Installation height and tilt
angle

Tutorial

Requirements


Connection Diagram

Registering face & palm
print Sample Code

Expected Results

Continuously identify faces,
palm prints, and QR codes

Sample Code

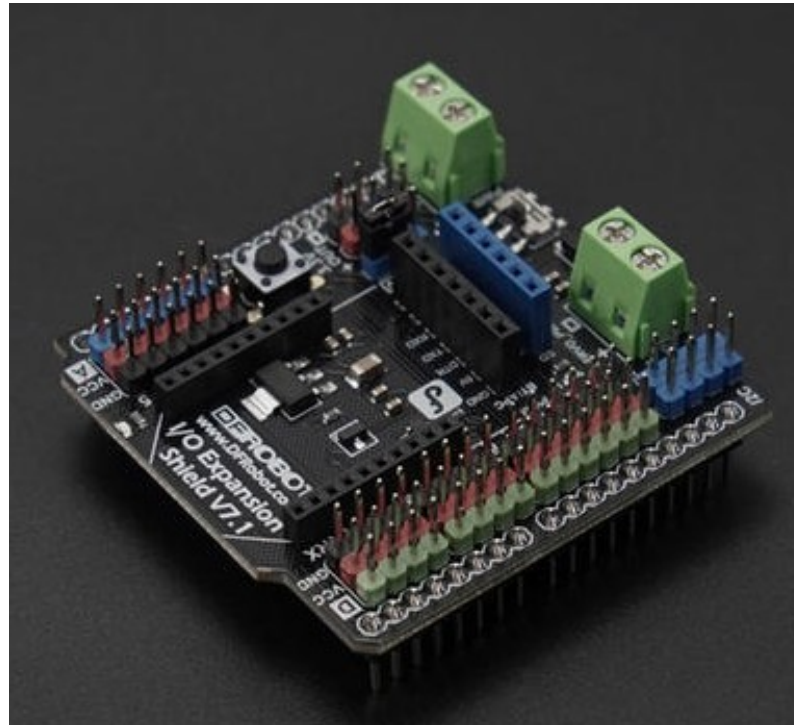


• Software

- Arduino IDE (<https://www.arduino.cc/en/Main/Software>)
- Download DFRobot_AI10 (https://github.com/DFRobot/DFRobot_AI10)library

Connection Diagram

The PC USB interface has low power, so it is recommended to use a 5V USB adapter for power supply, which will make the recognition more sensitive.

- Introduction
- Features
- Applications
- Specifications
- Functional diagram
- Board Overview
 - UART interface
 - USB interface
 - Microphone interface (reserved)
 - Speaker interface (reserved)
- Dimensional Drawing
- Installation height and tilt angle
- Tutorial
 - Requirements
 - Connection Diagram
 - Registering face & palm print Sample Code
 - Expected Results
 - Continuously identify faces, palm prints, and QR codes Sample Code

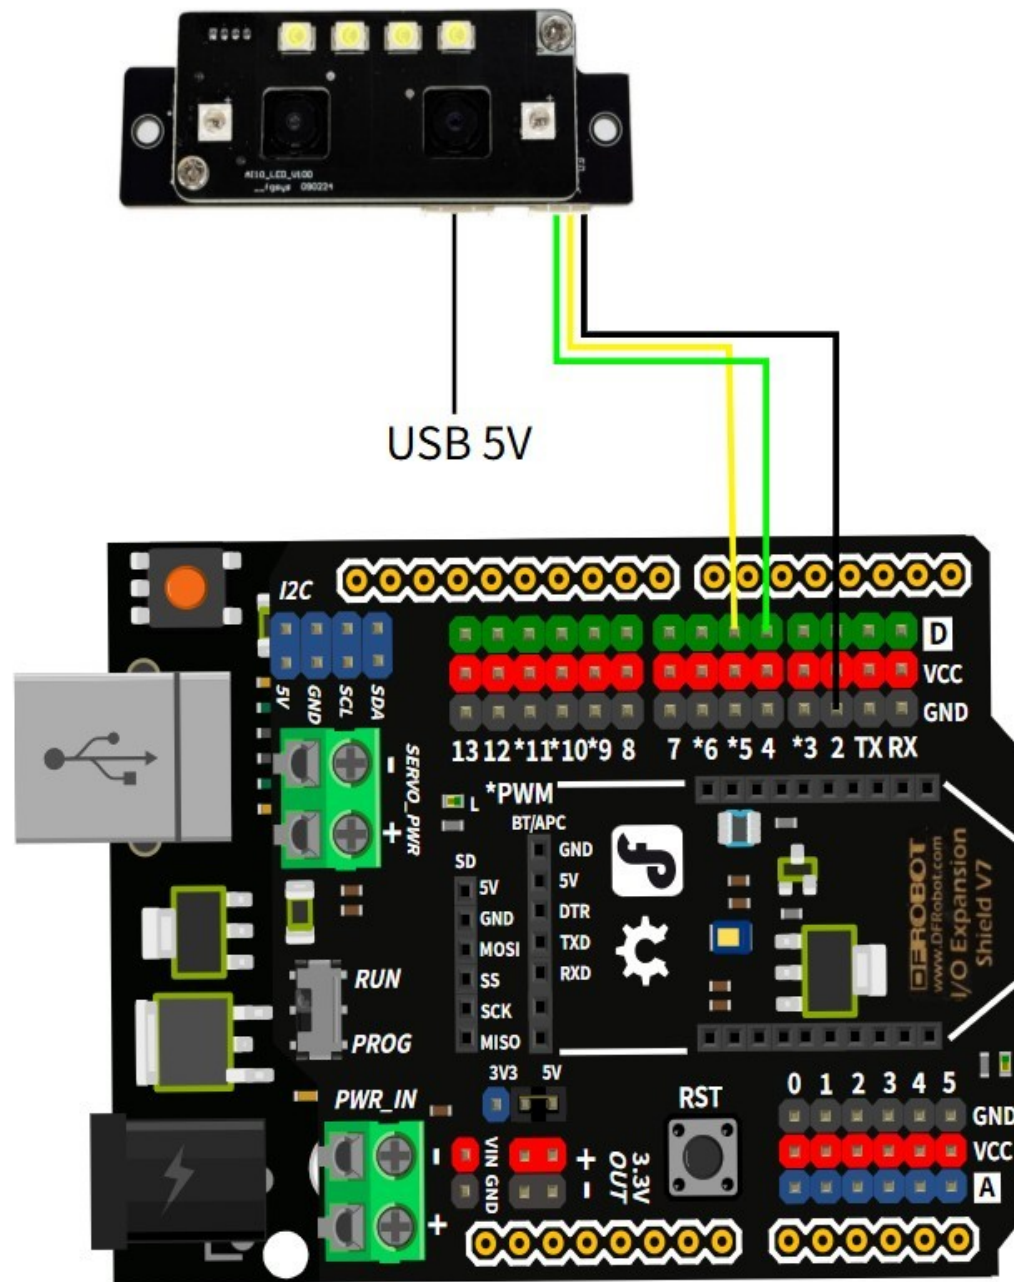

Introduction	
Features	
Applications	
Specifications	
Functional diagram	
Board Overview	
UART interface	
USB interface	
Microphone interface (reserved)	
Speaker interface (reserved)	
□ Dimensional Drawing	
Installation height and tilt angle	
Tutorial	
Requirements	
Connection Diagram	
Registering face & palm print Sample Code	
Expected Results	
Continuously identify faces, palm prints, and QR codes Sample Code	

Registering face & palm print Sample Code

When registering face or palm print, you need to fix the AI visual sensor and pay attention to the recognition distance, 30-120cm for face, 15cm for vein palm print, and 15cm for QR code. Only one face or palm print is registered each time. If you need to register multiple, you can press the reset button of the UNO R3 development board to register other faces or palm prints again.

	Introduction
	Features
	Applications
	Specifications
	Functional diagram
	Board Overview
	UART interface
	USB interface
	Microphone interface
	(reserved)
	Speaker interface
	(reserved)
□	Dimensional Drawing
	Installation height and tilt angle
	Tutorial
	Requirements
	Connection Diagram
	Registering face & palm print Sample Code
	Expected Results
	Continuously identify faces, palm prints, and QR codes Sample Code

```
/*!
 * @file singleRegisteredUser.ino
 * @brief This is an example of using the DFRobot_AI10 library to enroll a single
 * @copyright Copyright (c) 2025 DFRobot Co.Ltd (http://www.dfrobot.com)
 * @license The MIT License (MIT)
 * @author [jiali](zhixinliu@dfrobot.com)
 * @version V1.0
 * @date 2025-07-14
 * @url https://github.com/DFRobot/DFRobot_AI10
 */
#include "DFRobot_AI10.h"

/* -----
 *   board   |           MCU           | Leonardo/Mega2560/M0 | UNO
 *   VCC      |           3.3V/5V       |           VCC         | VCC
 *   GND       |           GND           |           GND         | GND
 *   RX        |           TX            | Serial1 TX1          | 5
 *   TX        |           RX            | Serial1 RX1          | 4
 * -----
 */
/* Baud rate cannot be changed , it is 115200 */

#if defined(ARDUINO_AVR_UNO) || defined(ESP8266)
    SoftwareSerial mySerial(4, 5);
    DFRobot_AI10_UART recognize(&mySerial ,115200);
#elif defined(ESP32)
    DFRobot_AI10_UART recognize(&Serial1,115200,/*rxd2*/25,/*txd3*/26);
#else
    DFRobot_AI10_UART recognize(&Serial1 ,115200);
#endif
#endif
```


Introduction

Features

Applications

Specifications

Functional diagram

Board Overview

UART interface

USB interface

Microphone interface
(reserved)

Speaker interface
(reserved)

□ Dimensional Drawing

Installation height and tilt
angle

Tutorial

Requirements

Connection Diagram

Registering face & palm
print Sample Code

Expected Results

Continuously identify faces,
palm prints, and QR codes
Sample Code

```
void setup() {
    Serial.begin(115200);
    while (!Serial);
    while(!recognize.begin()){
        Serial.println("NO Devices !");
        delay(1000);
    }
    Serial.println("Device connected!");

    Serial.println("Start to enroll a user...");

    //User enroll result and info
    sUserData_t udata;

    /*
    *admin permission is required to register a user. eNormal: average person , eAdmin:
    *userName registered user name, the length is 32 bytes at most
    *timeout is the time to wait for the recognition result, the range is 3-20 seconds
    */

    udata = recognize.enrollUser(/*admin*/eNormal,/*userName*/"User1",/*timeout*/ 5)

    //Check if the registration is successful, if successful, print the user information
    if(udata.result == eSuccess){
        Serial.println("User enrolled successfully!");
        Serial.print("UID: ");
        Serial.println(udata.UID);
    }
}
```

Introduction

Features

Applications

Specifications

Functional diagram

Board Overview

UART interface

USB interface

Microphone interface
(reserved)

Speaker interface
(reserved)

□ Dimensional Drawing

Installation height and tilt
angle

Tutorial

Requirements

Connection Diagram

Registering face & palm
print Sample Code

Expected Results

Continuously identify faces,
palm prints, and QR codes
Sample Code

```
Serial.print("User name: ");
Serial.println(udata.userName);
Serial.print("Admin permission: ");
Serial.println(udata.admin == eNormal ? "Normal":"Admin");
Serial.print("User enrolled type: ");
Serial.println(udata.type == eFace ? "Face":"Palm");
}else if (udata.result == eFailedFaceEnrolled){
    Serial.println("Failed to enroll user, user already enrolled!");
}else{
    Serial.println("Failed to enroll user!");
}
}

void loop() {

    delay(100);
}
```

Expected Results

Register through the reset button of the UNO R3 development board. Each reset can register a face or palm print once. Each registration time is 5S. ID 1-1000 is face, and 1001-2000 is vein palm print.

	Introduction
	Features
	Applications
	Specifications
	Functional diagram
	Board Overview
	UART interface
	USB interface
	Microphone interface
	(reserved)
	Speaker interface
	(reserved)
□	Dimensional Drawing
	Installation height and tilt angle
	Tutorial
	Requirements
	Connection Diagram
	Registering face & palm print Sample Code
	Expected Results
	Continuously identify faces, palm prints, and QR codes Sample Code

```
14:48:00.836 -> Device connected!
14:48:00.840 -> Start to enroll a user...
14:48:03.490 -> User enrolled successfully!
14:48:03.490 -> UID: 1
14:48:03.527 -> User name: User1
14:48:03.527 -> Admin permission: Normal
14:48:03.527 -> User enrolled type: Face
14:48:15.691 -> Device connected!
14:48:15.691 -> Start to enroll a user...
14:48:19.865 -> User enrolled successfully!
14:48:19.865 -> UID: 1001
14:48:19.865 -> User name: User1
14:48:19.865 -> Admin permission: Normal
14:48:19.865 -> User enrolled type: Palm
```

Continuously identify faces, palm prints, and QR codes Sample Code

Continuously identify faces, palm prints, and QR codes, and print the corresponding information through the serial port monitor. If it cannot be recognized, you can adjust the distance or posture slightly and keep it still.



Introduction

Features

Applications

Specifications

Functional diagram

Board Overview

UART interface

USB interface

Microphone interface
(reserved)

Speaker interface
(reserved)

Dimensional Drawing

Installation height and tilt
angle

Tutorial

Requirements

Connection Diagram

Registering face & palm
print Sample Code

Expected Results

Continuously identify faces,
palm prints, and QR codes
Sample Code

```
/*!
 * @file continuousRecognition.ino
 * @brief This is an example of using the DFRobot_AI10 library to recognize human
 * @copyright Copyright (c) 2025 DFRobot Co.Ltd (http://www.dfrobot.com)
 * @license The MIT License (MIT)
 * @author [jiali](zhixinliu@dfrobot.com)
 * @version V1.0
 * @date 2025-07-14
 * @url https://github.com/DFRobot/DFRobot_AI10
 */
#include "DFRobot_AI10.h"

/* -----
 *      board      |          MCU          | Leonardo/Mega2560/M0 | UNO
 *      VCC        |          3.3V/5V      |          VCC          | VCC
 *      GND        |          GND          |          GND          | GND
 *      RX         |          TX           | Serial1 TX1          | 5
 *      TX         |          RX           | Serial1 RX1          | 4
 * -----
 */
/* Baud rate cannot be changed , it is 115200 */

#if defined(ARDUINO_AVR_UNO) || defined(ESP8266)
    SoftwareSerial mySerial(4, 5);
    DFRobot_AI10_UART recognize(&mySerial ,115200);
#elif defined(ESP32)
    DFRobot_AI10_UART recognize(&Serial1,115200,/*rxd2*/25,/*txd3*/26);
#else
    DFRobot_AI10_UART recognize(&Serial1 ,115200);
#endif
```

	Introduction
	Features
	Applications
	Specifications
	Functional diagram
	Board Overview
	UART interface
	USB interface
	Microphone interface (reserved)
	Speaker interface (reserved)
□	Dimensional Drawing
	Installation height and tilt angle
	Tutorial
	Requirements
	Connection Diagram
	Registering face & palm print Sample Code
	Expected Results
	Continuously identify faces, palm prints, and QR codes Sample Code

```
void setup() {
    Serial.begin(115200);
    while (!Serial);
    while(!recognize.begin()){
        Serial.println("NO Devices !");
        delay(1000);
    }
    Serial.println("Device connected!");

    //Enable face frame
    if(recognize.enableFaceFrame()){
        Serial.println("Face frame enabled!");
    }
}

void loop() {
    //Continuous recognition result

    sRecognitionData_t recDat;

    /* When a human face is detected, the system automatically starts the recogniti
    x seconds, the recognition stops and the module continues with low-power face de
    */
    Serial.println("=====");
    Serial.println("Recognize...");

    recDat = recognize.startContinuousFaceRecognition(/*timeout*/5);
```

Introduction

Features

Applications

Specifications

Functional diagram

Board Overview

UART interface

USB interface

Microphone interface
(reserved)

Speaker interface
(reserved)

Dimensional Drawing

Installation height and tilt angle

Tutorial

Requirements

Connection Diagram

Registering face & palm
print Sample Code

Expected Results

Continuously identify faces,
palm prints, and QR codes
Sample Code

```
//Print the recognition result
if(recDat.result == eSuccess){
    Serial.println("Recognition successful!");
    Serial.print("Recognition type: ");

    if(recDat.type == eQR){
        Serial.println("QR code");
        Serial.print("QR code data: ");
        Serial.println(recDat.QRDdata);
    }else{
        Serial.println(recDat.type == eFace ? "Face" : "Palm");
        Serial.print("User ID: ");
        Serial.println(recDat.userData.UID);
        Serial.print("User Name: ");
        Serial.println(recDat.userData.userName);
        Serial.print("Admin Permission: ");
        Serial.println(recDat.userData.admin == eAdmin ? "Admin" : "Normal");
    }
}

}else{
    Serial.println("Recognition failed!");
    Serial.print("Failed code: ");
    Serial.print(recDat.result);

    if(recDat.result == eFailedTimeout){
        Serial.println(" Recognition timed out!");
    }else if(recDat.result == eFailedCamera){
        Serial.println(" Camera error!");
    }else if(recDat.result == eFailedLiveCheck){
```

```
        Serial.println(" Live check failed!");
    }else{
        Serial.println();
    }
}
Serial.println("=====");
}
```

Expected Results

Continuously identify the detected faces, palm prints, and QR codes, and print the corresponding information through the serial port monitor.

Introduction

Features

Applications

Specifications

Functional diagram

Board Overview

UART interface

USB interface

Microphone interface
(reserved)

Speaker interface
(reserved)

□ Dimensional Drawing

Installation height and tilt
angle

Tutorial

Requirements

Connection Diagram

Registering face & palm
print Sample Code

Expected Results

Continuously identify faces,
palm prints, and QR codes

Sample Code

Introduction

Features

Applications

Specifications

Functional diagram

Board Overview

UART interface

USB interface

Microphone interface
(reserved)

Speaker interface
(reserved)

□ Dimensional Drawing

Installation height and tilt
angle

Tutorial

Requirements

Connection Diagram

Registering face & palm
print Sample Code

Expected Results

Continuously identify faces,
palm prints, and QR codes
Sample Code

```
15:08:49.479 -> Device connected!
15:08:49.580 -> Face frame enabled!
15:08:54.612 -> Recognize...
15:08:55.957 -> Recognition successful!
15:08:55.957 -> Recognition type: Face
15:08:55.991 -> User ID: 1
15:08:55.991 -> User Name: User1
15:08:55.991 -> Admin Permission: Normal
15:08:59.376 -> Recognition successful!
15:08:59.376 -> Recognition type: Palm
15:08:59.376 -> User ID: 1001
15:08:59.376 -> User Name: User1
15:08:59.376 -> Admin Permission: Normal
15:09:03.947 -> Recognize...
15:09:08.849 -> Recognition successful!
15:09:08.849 -> Recognition type: QR code
15:09:08.849 -> QR code data: DFRobot
```

User statistics & user deletion Sample Code

Input command: AT+GETUSERS, query all user numbers and IDs

Input command: AT+DELUSER=1, delete the specified user ID1, 1 can be replaced by other user IDs

Input command: AT+DELALLUSERS, delete all registered users



Introduction

Features

Applications

Specifications

Functional diagram

Board Overview

UART interface

USB interface

Microphone interface

(reserved)

Speaker interface

(reserved)

Dimensional Drawing

Installation height and tilt angle

Tutorial

Requirements

Connection Diagram

Registering face & palm print Sample Code

Expected Results

Continuously identify faces, palm prints, and QR codes Sample Code

```
/*!
 * @file operateUserData.ino
 * @brief This is an example of how to use the DFRobot_AI10 library to operate use
 * @copyright Copyright (c) 2025 DFRobot Co.Ltd (http://www.dfrobot.com)
 * @license The MIT License (MIT)
 * @author [jiali](zhixinliu@dfrobot.com)
 * @version V1.0
 * @date 2025-07-14
 * @url https://github.com/DFRobot/DFRobot_AI10
 */
#include "DFRobot_AI10.h"

/* -----
 *      board      |          MCU          | Leonardo/Mega2560/M0 | UNO
 *      VCC        |          3.3V/5V      |          VCC          | VCC
 *      GND        |          GND          |          GND          | GND
 *      RX         |          TX           | Serial1 TX1          | 5
 *      TX         |          RX           | Serial1 RX1          | 4
 * -----
 */
/* Baud rate cannot be changed , it is 115200 */

#if defined(ARDUINO_AVR_UNO) || defined(ESP8266)
    SoftwareSerial mySerial(4, 5);
    DFRobot_AI10_UART recognize(&mySerial ,115200);
#elif defined(ESP32)
    DFRobot_AI10_UART recognize(&Serial1,115200,/*rxd2*/25,/*txd3*/26);
#else
    DFRobot_AI10_UART recognize(&Serial1 ,115200);
#endif
```

	Introduction
	Features
	Applications
	Specifications
	Functional diagram
	Board Overview
	UART interface
	USB interface
	Microphone interface
	(reserved)
	Speaker interface
	(reserved)
□	Dimensional Drawing
	Installation height and tilt angle
	Tutorial
	Requirements
	Connection Diagram
	Registering face & palm print Sample Code
	Expected Results
	Continuously identify faces, palm prints, and QR codes Sample Code

```
void setup() {
    Serial.begin(115200);
    while (!Serial);
    while(!recognize.begin()){
        Serial.println("NO Devices !");
        delay(1000);
    }
    Serial.println("Device connected!");

    Serial.println("AI10 An example of AT command control");
    Serial.println("-----");
    Serial.println("Available commands:");
    Serial.println("AT+GETUSERS      # Get all user information");
    Serial.println("AT+DELUSER=ID      # Delete the specified user (e.g. AT+DELUSER=0");
    Serial.println("AT+DELALLUSERS     # Delete all users");
    Serial.println("-----");
    Serial.println("Note: When sending, end with '\\n\\'. Please pay attention to li");
    Serial.println("-----");
}

void loop() {
    sAllUserID_t alluser;
    int i;

    if (Serial.available()) {
        // Read the command from the serial port
        String command = Serial.readStringUntil('\n');
```

	Introduction
	Features
	Applications
	Specifications
	Functional diagram
	Board Overview
	UART interface
	USB interface
	Microphone interface
	(reserved)
	Speaker interface
	(reserved)
□	Dimensional Drawing
	Installation height and tilt angle
	Tutorial
	Requirements
	Connection Diagram
	Registering face & palm print Sample Code
	Expected Results
	Continuously identify faces, palm prints, and QR codes
	Sample Code

```
command.trim();

if (command.startsWith("AT+GETUSERS")){
    /* Get all user information*/
    alluser = recognize.getAllUserIDs();
    if(alluser.result == eSuccess){
        Serial.print("User number:");
        Serial.println(alluser.userNum);
        if(alluser.userNum != 0){
            Serial.print("User IDs:");
            for(i=0;i<alluser.userNum;i++){
                Serial.print(alluser.UIDS[i]);
                Serial.print(" ");
            }
            Serial.println();
        }
    }
    Serial.println("OK");

} else if (command.startsWith("AT+DELUSER=")) {
    uint16_t ID = command.substring(11).toInt();
    /* Delete the user with the specified ID*/
    if(recognize.deleteUser(ID)){
        Serial.println("successfully deleted!");
    }
    Serial.println("OK");

} else if (command.endsWith("AT+DELALLUSERS")) {
    /* Delete all users */
```

Introduction

Features

Applications

Specifications

Functional diagram

Board Overview

UART interface

USB interface

Microphone interface
(reserved)

Speaker interface
(reserved)

□ Dimensional Drawing

Installation height and tilt
angle

Tutorial

Requirements

Connection Diagram

Registering face & palm
print Sample Code

Expected Results

Continuously identify faces,
palm prints, and QR codes
Sample Code

```
        if(recognize.deleteAllUser()){
            Serial.println("successfully deleted!");
        }
        Serial.println("OK");

    } else {
        Serial.println("The command is incorrect!");
    }
}
}
```


Expected Results

Enter the corresponding command to query the number of users, delete users, etc.

```
15:14:04.995 -> Device connected!
15:14:04.995 -> AI10 An example of AT command control
15:14:04.995 -> -----
15:14:04.995 -> Available commands:
15:14:04.995 -> AT+GETUSERS      # Get all user information
15:14:04.995 -> AT+DELUSER=ID      # Delete the specified user (e.g. AT+DELUSER=0x1001)
15:14:04.995 -> AT+DELALLUSERS     # Delete all users
15:14:05.048 -> -----
15:14:05.048 -> Note: When sending, end with '\n'. Please pay attention to line breaks!
15:14:05.048 -> -----
15:18:23.585 -> User number:2
15:18:23.585 -> User IDs:1 1001
15:18:23.585 -> OK
```

Cover plate recommendation and installation method

The AI vision algorithm module is assembled inside the product, and a cover plate needs to be attached to the top of the AI vision algorithm module to prevent water, dust and damage.

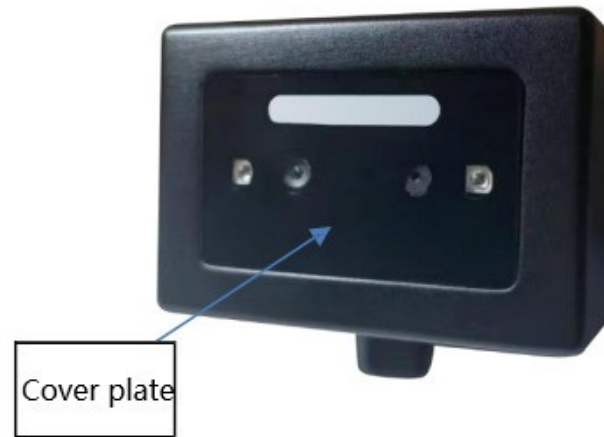

1. The cover plate and the module are installed directly

The top of the lens of the AI vision algorithm module and the top of the LED lamp bead are basically on the same horizontal plane. When installing the AI vision algorithm module, it is recommended that the lens on the AI vision algorithm module and the cover plate are as close as possible but not in contact, with a gap of $\leq 1\text{mm}$.

The contact surface between the lens and the cover plate is shielded by light-shielding foam (thickness: 2~3mm) (foam is already standard when leaving the factory), and the light-shielding foam is close to the cover plate. The hole of the light-shielding foam is outside the visible area of the camera to avoid blocking the visible area. The opening area of the cover must also be outside the visible area of the camera to avoid blocking the visible area of the camera.

Introduction

Features

Applications

Specifications

Functional diagram

Board Overview

UART interface

USB interface

Microphone interface
(reserved)

Speaker interface
(reserved)

□ Dimensional Drawing

Installation height and tilt
angle

Tutorial

Requirements

Connection Diagram

Registering face & palm
print Sample Code

Expected Results

Continuously identify faces,
palm prints, and QR codes
Sample Code



Introduction

Features

Applications

Specifications

Functional diagram

Board Overview

UART interface

USB interface

Microphone interface
(reserved)

Speaker interface
(reserved)

Dimensional Drawing

Installation height and tilt
angle

Tutorial

Requirements


Connection Diagram

Registering face & palm
print Sample Code

Expected Results

Continuously identify faces,
palm prints, and QR codes
Sample Code

If the gap between the cover and the lens is large, the LED light will be reflected into the camera through the cover, causing the image to be overexposed and the portrait cannot be recognized normally.

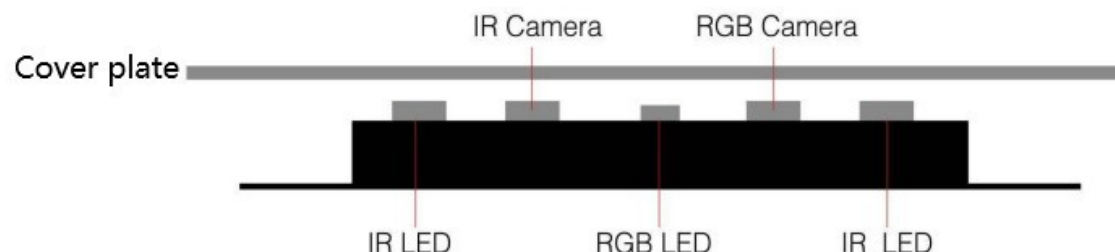

2. Size of the cover window

When making the cover, it is necessary to leave a transparent window in the visible area of the camera and the irradiation area of the LED light, and the transparent light transmittance should reach 90% or more.

Based on the viewing angle of the camera and LED light, and taking into account the tolerance of mold opening and installation tolerance, it is recommended that the horizontal opening angle of the LED light be $\geq 90^\circ$; the horizontal opening angle of the camera be $\geq 60^\circ$, and the vertical opening angle of the two be $\geq 78^\circ$ (as shown below). It is recommended that the cover plate be 2.5mm away from the light board, the lens opening diameter be 6mm, and the LED light hole diameter be 6.3mm, which can meet the requirement of not blocking the field of view.

Introduction

Features

Applications

Specifications

Functional diagram

Board Overview

UART interface

USB interface

Microphone interface
(reserved)

Speaker interface
(reserved)

□ Dimensional Drawing

Installation height and tilt
angle

Tutorial



Requirements

Connection Diagram

Registering face & palm
print Sample Code

Expected Results

Continuously identify faces,
palm prints, and QR codes
Sample Code

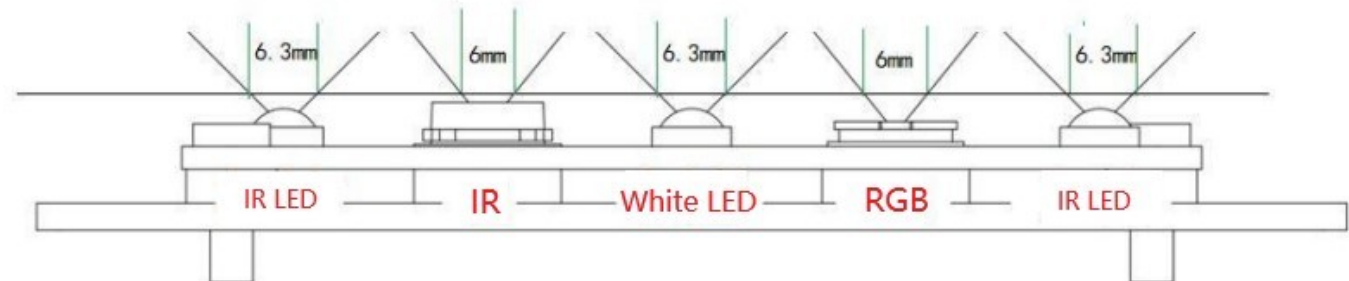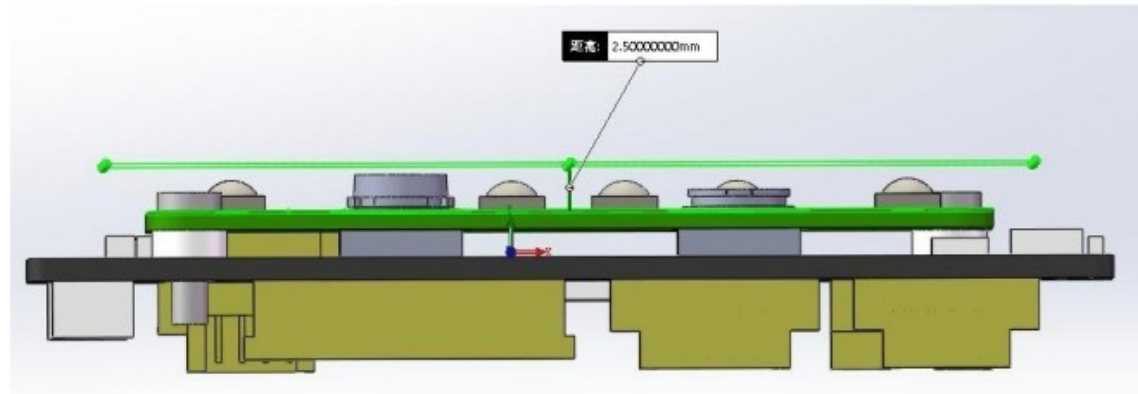

3. Choice of cover

(1) Cover material: tempered glass or acrylic




(2) It is recommended to make the window of the white light LED part of the cover into a long strip. As shown in the figure, a light-diffusing film can be pasted on the back of the long strip window, or white light-transmitting ink can be sprayed when making the cover. To prevent glare caused by white light on

(3) The infrared light and camera window of the cover are transparent, and the light transmittance of the

transparent part is $\geq 90\%$ (850nm band)

(4) Cover thickness: 0.55mm~1.5mm, 1mm is recommended as the best

(5) Cover design reference

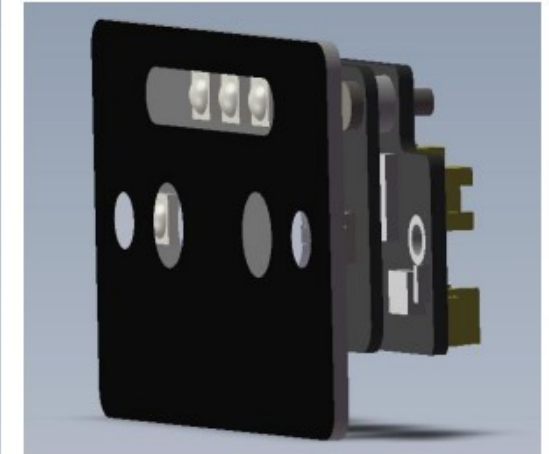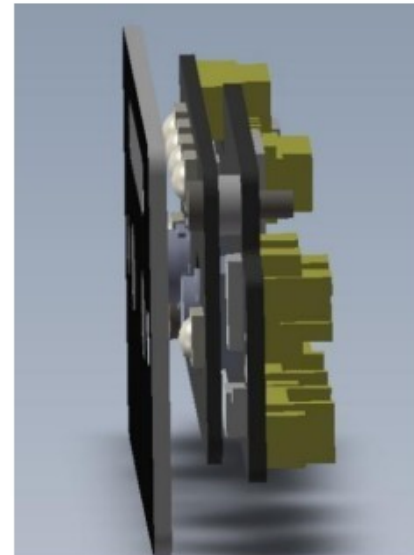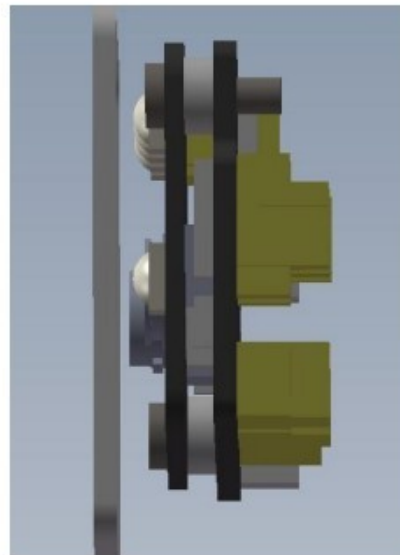

Introduction

Features

Applications

Specifications

Functional diagram

Board Overview

UART interface

USB interface

Microphone interface
(reserved)

Speaker interface
(reserved)

□ Dimensional Drawing

Installation height and tilt
angle

Tutorial

Requirements

Connection Diagram

Registering face & palm
print Sample Code

Expected Results

Continuously identify faces,
palm prints, and QR codes


Sample Code

Assembly of shell and bracket

When the algorithm AI vision algorithm module is placed on the shell or bracket, it should be positioned to prevent movement when screwing, causing the center of the camera to deviate from the hole position and block the imaging.

The diameter of the through holes on both sides of the AI vision algorithm module is 2.2mm, and M2 screws are preferred.

After installation, the center of the camera should be aligned with the center of the housing or bracket through-hole to ensure that the camera imaging is not blocked. The algorithm AI vision algorithm module cannot be touched or squeezed by other structures to avoid short circuit or damage.

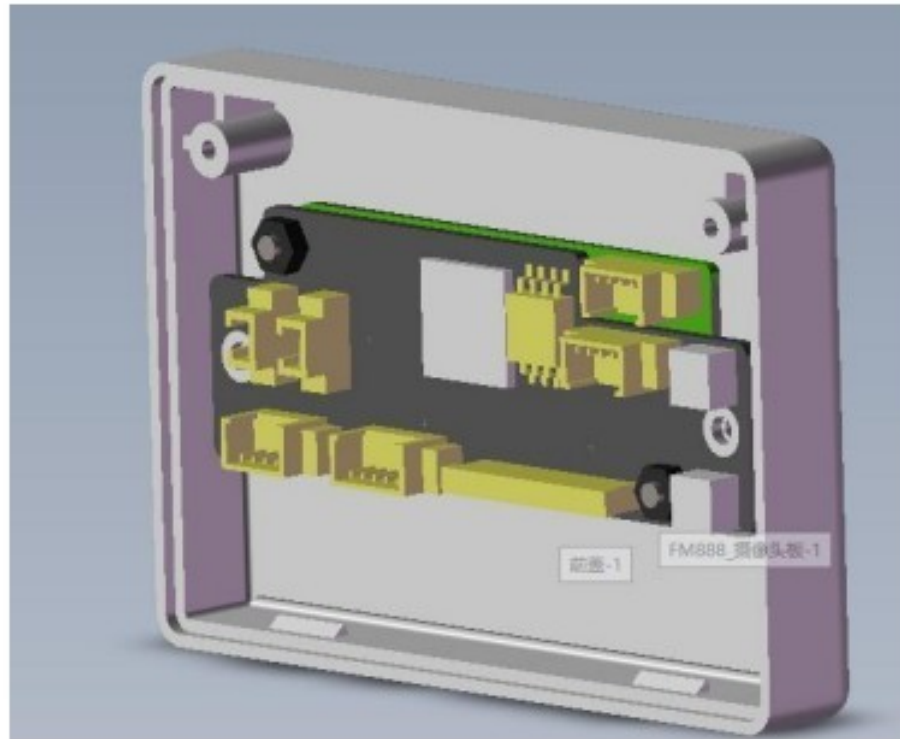

Introduction

Features

Applications

Specifications

Functional diagram

Board Overview

UART interface

USB interface

Microphone interface
(reserved)

Speaker interface
(reserved)

□ Dimensional Drawing

Installation height and tilt
angle

Tutorial

Requirements

Connection Diagram

Registering face & palm
print Sample Code

Expected Results

Continuously identify faces,
palm prints, and QR codes
Sample Code



Introduction

Features

Applications

Specifications

Functional diagram

Board Overview

UART interface

USB interface

Microphone interface
(reserved)

Speaker interface
(reserved)

Dimensional Drawing

Installation height and tilt
angle

Tutorial

Requirements

Connection Diagram

Registering face & palm
print Sample Code

Expected Results

Continuously identify faces,
palm prints, and QR codes
Sample Code

FAQ

- When in use, the sensor USB port must be connected to a 5V USB power supply
- The foam on both sides of the camera cannot be removed
- Chip heating is normal

More Documents

- Development Manual
(<https://dfimg.dfrobot.com/95a9cd2bec674008b039ef43bcd5638e/wikien/ed7f289e5d6f6f8c56812819ea8aee9f.pdf>)
- GUI (<https://github.com/DFRobotdl/SEN0677-AI-Binocular-3D-Vision-Recognition-Sensor>)

Back to Top 